



Verify that the screws do not stand out of the plastic base in which they were screwed in.

COMPRUEBE QUE LOS TORNILLOS NO SOBRESALEN DEL PLANO DEL PLASTICO DONDE ESTAN ROSCADOS.

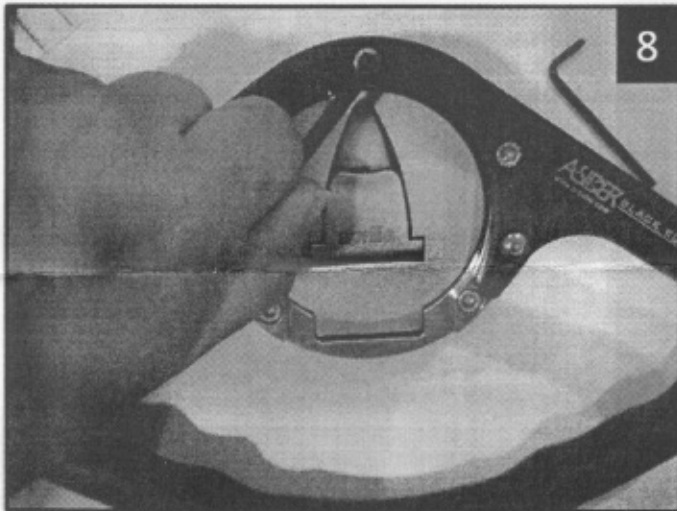

Tighten the 5 screws which put together the A-SIDER handle and the gas cap.

TERMINE DE APRETAR POR IGUAL LOS 5 TORNILLOS QUE UNEN EL ASIDERO A LA CARCASA DEL TAPON DE COMBUSTIBLE.

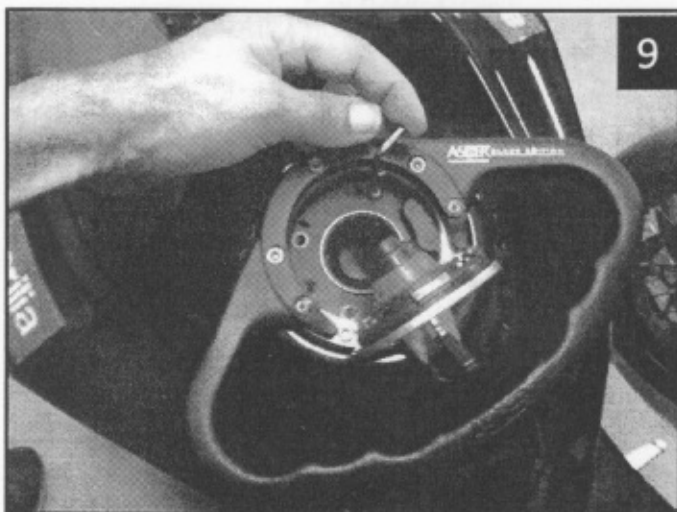

Screw the fastening screws of the gas cap into the gas tank and tighten carefully. Covering the fuel tank hole is recommended so as to avoid objects from falling inside.

ROSCAR LOS TORNILLOS DE SUJECCION DEL TAPON AL DEPOSITO DE COMBUSTIBLE Y APRETAR ADECUADAMENTE. ES RECOMENDABLE TAPAR EL ORIFICIO DEL DEPOSITO DE COMBUSTIBLE Y EVITAREMOS QUE CAIGA CUALQUIER OBJETO DENTRO.