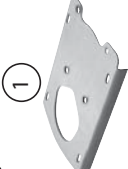











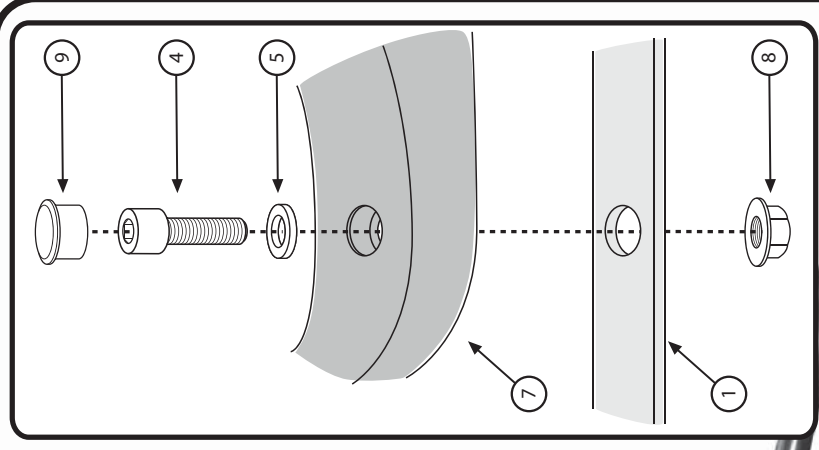
SR5107 - KSR5107

PIASTRA SPECIFICA - SPECIFIC PLATE
PLATINE SPECIFIQUE - SPECIFISCHE PLATTE - PARRILLA ESPECIFICA

BMW F650GS - F700GS - F800GS 2008 - 2013

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCCIONES DE MONTAJE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

 <p>1</p> <p>SUPPORTO GL2267 SUPPORT SUPPORT SOPORTE</p> <p>Q.TY n.1</p>	 <p>2</p> <p>VITE TEF M8x60mm SCREW M8x60mm SCHRAUBE M8x60mm TORNILLO M8x60mm</p> <p>Q.TY n.2</p>	 <p>3</p> <p>VITE TEF M8x55mm SCREW M8x55mm SCHRAUBE M8x55mm TORNILLO M8x55mm</p> <p>Q.TY n.2</p>	 <p>4</p> <p>VITE TCEI M6x25mm SCREW VIS SCHRAUBE TORNILLO</p> <p>Q.TY n.4</p>	 <p>5</p> <p>RONDELLA Ø6mm WASHER Ø6mm RONDELLE Ø6mm SCHIBE Ø6mm ARANDELA Ø6mm</p> <p>Q.TY n.4</p>	 <p>6</p> <p>DISTANZIALE Ø16x32mm SPACER ENTRETOISE DISTANZSTÜCK DISTANCIADOR</p> <p>Q.TY n.2</p>	 <p>7</p> <p>PIASTRA MONOKEY PLATE PLATINE PLATE PARRILLA</p> <p>Q.TY n.1</p>	 <p>8</p> <p>DADO A.B. M6 BOLT M6 ECROU M6 MUTTER M6 TUERCA M6</p> <p>Q.TY n.4</p>	 <p>9</p> <p>COPRIFORO BOLT CAP LETTROU STOPSLÖCK TAPA AGUJERO</p> <p>Q.TY n.6</p>	 <p>10</p> <p>DISTANZIALE Ø22x5mm SPACER ENTRETOISE DISTANZSTÜCK DISTANCIADOR</p> <p>Q.TY n.2</p>
---	--	--	---	---	--	---	--	--	--



10

SOLO CON PORTAVALIGE LATERALE SPECIFICO
ONLY WITH SPECIFIC TUBULAR SIDE-CASE HOLDER
SEUL AVEC PORTE-VALISES LATERAUX SPECIFIQUE
NUR FÜR SPEZIFISCHES STAHLROHR-SEITENTRÄGER
SOLO CON PORTA-MALETAS LATERAL ESPECIFICO