



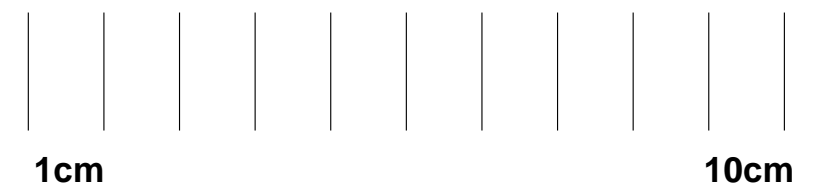

Bohrschablone Art. Nr. 700.311 Rückenpolster Journey Topcase 40

Drilling pattern No. 700.311 Back rest Journey Topcase 40

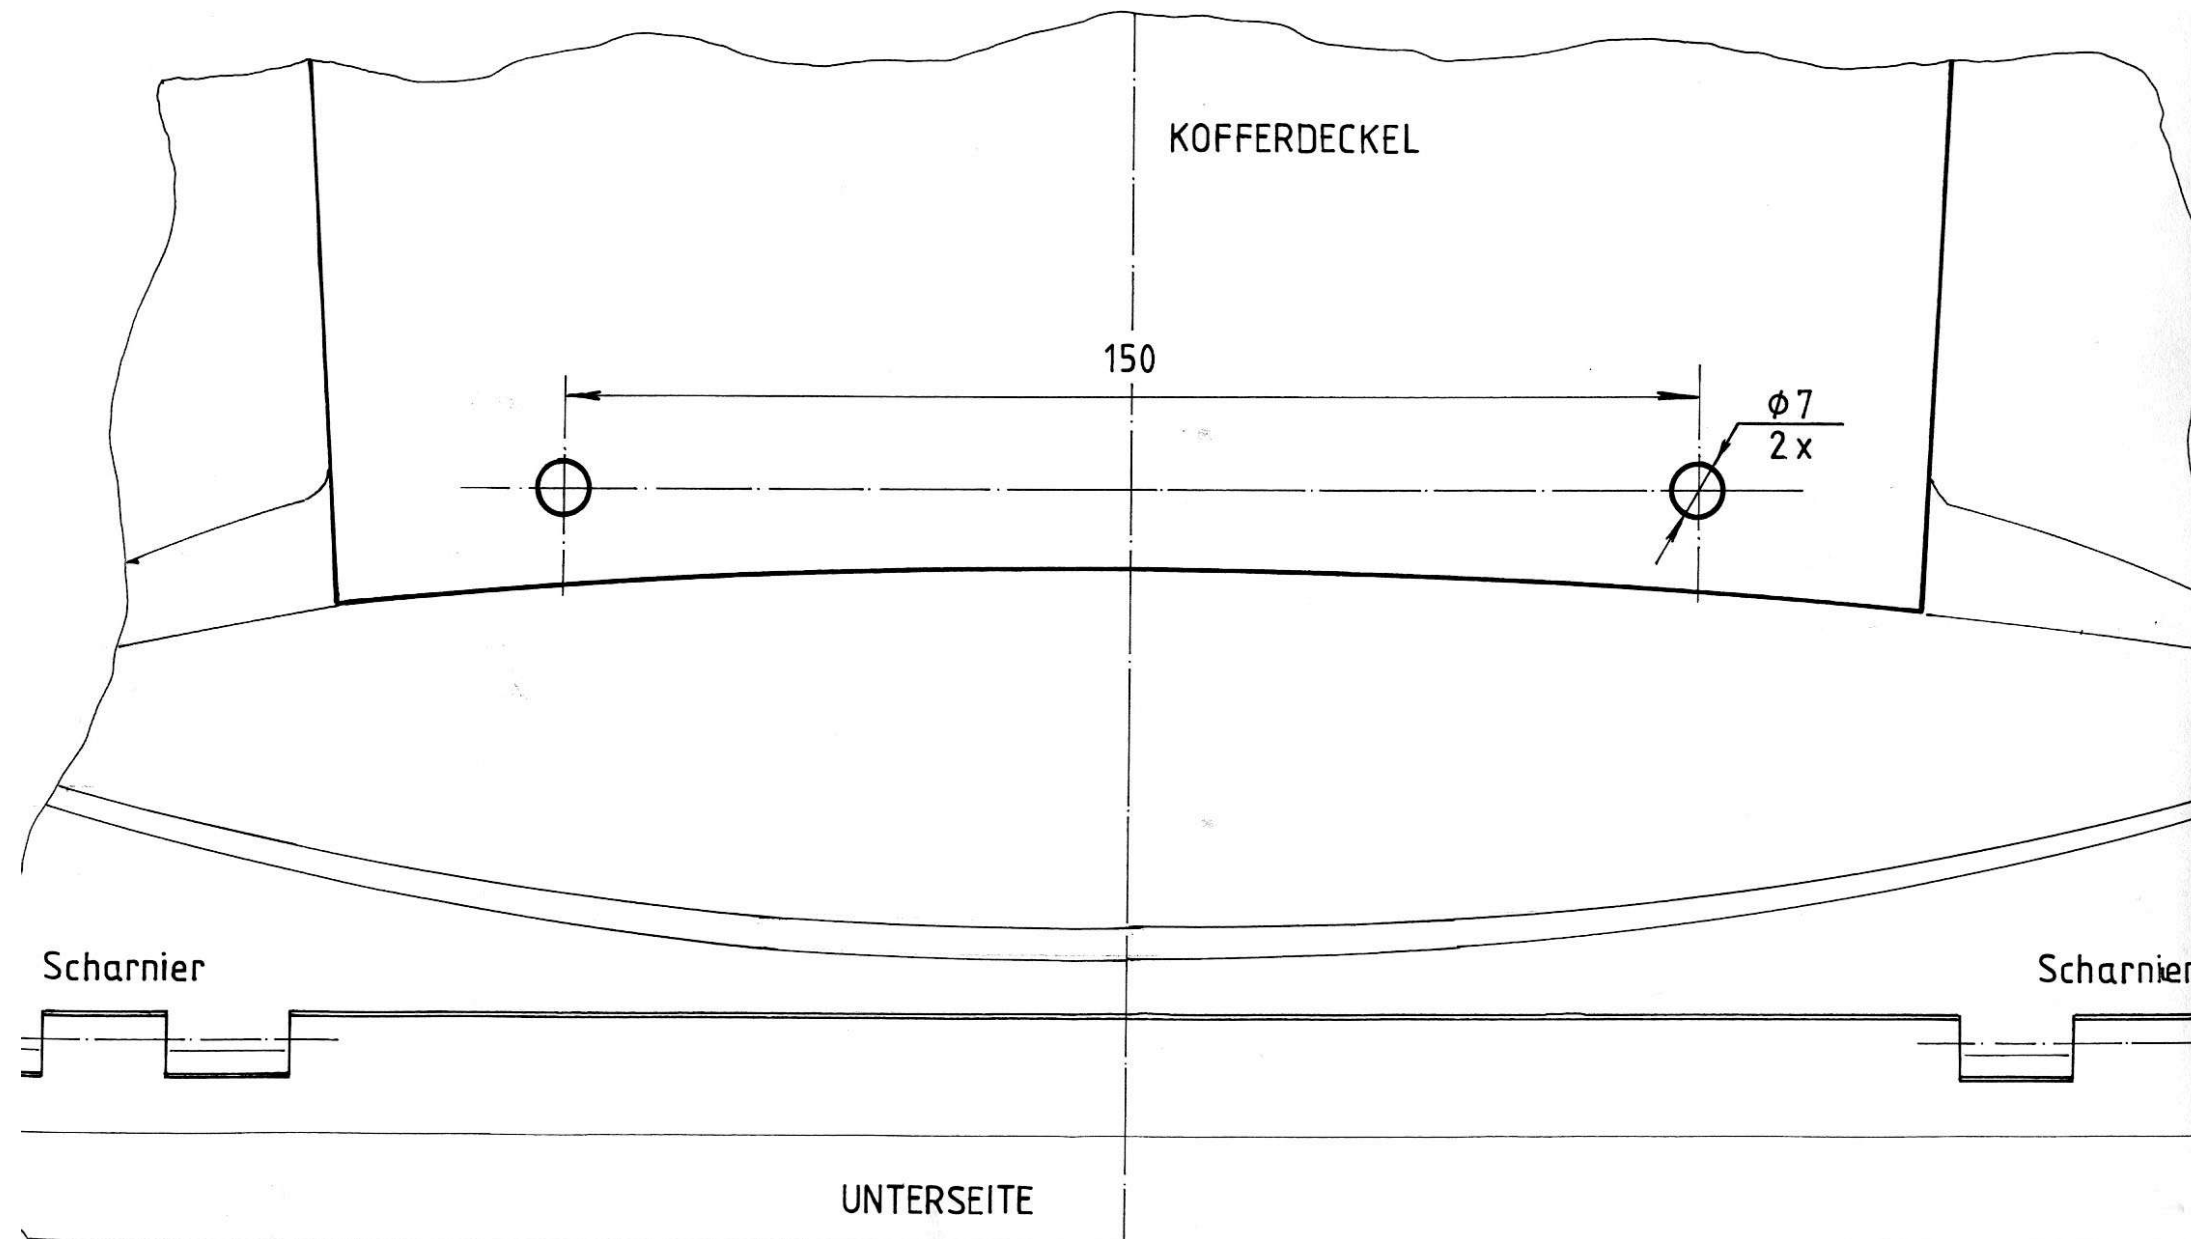

Vor dem Bohren Mass kontrollieren !
Control dimension before drilling !