


SHAD

TRIUMPH TIGER SPORT 1050 '16 TOTG16IF

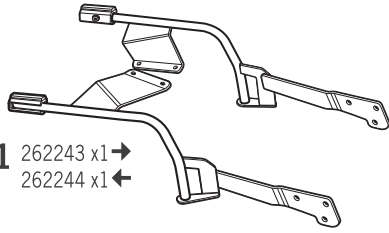

1 262243 x1 →
262244 x1 ←



2 303017 x6
Ø6



3 304280 x6
M6 x 16



4 303045 x4
Ø8



5 304039 x4
M8 x 40
Din 7380



6 261029 x4
Ø20 Ø10 x 15

! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master after the 3p system.

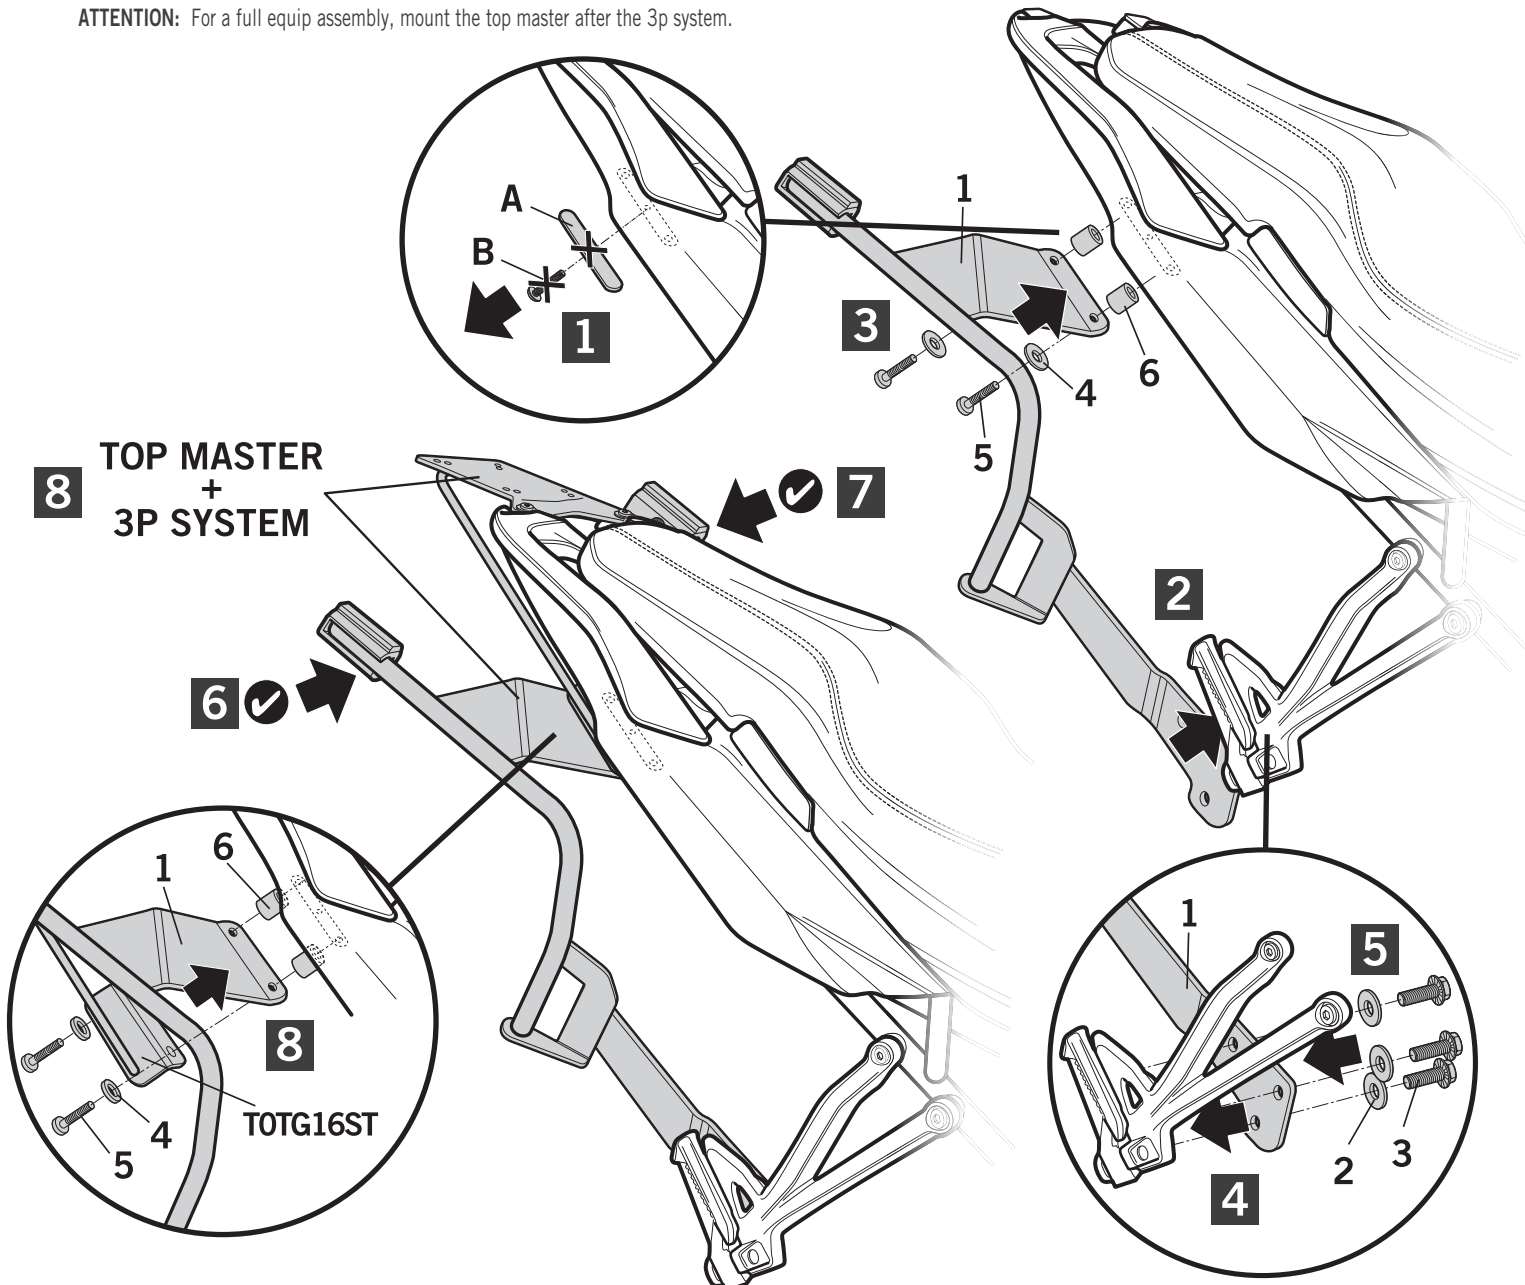

8 TOP MASTER
+
3P SYSTEM

TOTG16ST